

























Switching on the new £50 Note

Always finish any open counts by pressing the  key repeatedly until HOME is displayed.

1. Use the  key to select '**Setup Wizard**' and then press the  key.
2. Use the  key to select '**Note Wizard**' and press the  key.
3. If you are asked for a PIN number press the arrow keys in the following order , , , .
4. Use the  key to select '**£50N**' and press the right-hand soft key  labelled '**Change**' to change the **X** to a .
5. Then press the middle soft key  labelled '**Edit**'
6. T-i^X will check that you have the correct notes to reset. Press the  key.
7. T-i^X will ask you to place 10 notes onto the Money Platform instead place 4 x £1 coins on to the Money Platform and press the  key, T-i^X will continue to ask you for another 5 notes simply press the  key repeatedly until 'Weight Set-up Complete' and then press the  key to save the weight.
8. Press the left hand soft key  labelled '**Back**' until you return to the main '**SET UP WIZARD**' screen.
9. Use the  key to select '**Packaged Note Wizard**' and then press the  key.
10. Use the  key to select '**£50N**' and press the  key, with Band 1 highlighted press the middle soft key  labelled '**Edit**'.
11. Place 5 empty £50 note bands onto the Money Platform and press the  key.
12. New £50 notes are now set on your unit. Press the  key to return to normal counting.

If you require assistance then please call the customer helpline on:

08707 87 70 87